

Trust Precision Engineering

- Trust Precision Engineering Ltd
 - Unit 2
 - Meadowbank Court
 - Eastwood
 - Nottingham
 - NG16 3SL
 - **Tel:** 01773 719239
 - www.trustprecisionengineering.co.uk
 - info@trustprecisionengineering.co.uk
- Triumph Speed Triple 1200 RS
 - Tail Tidy Kit Installation guide




Step 1

Pull the rubber bolt cover back




Step 2

Remove the bolt and rear seat cover

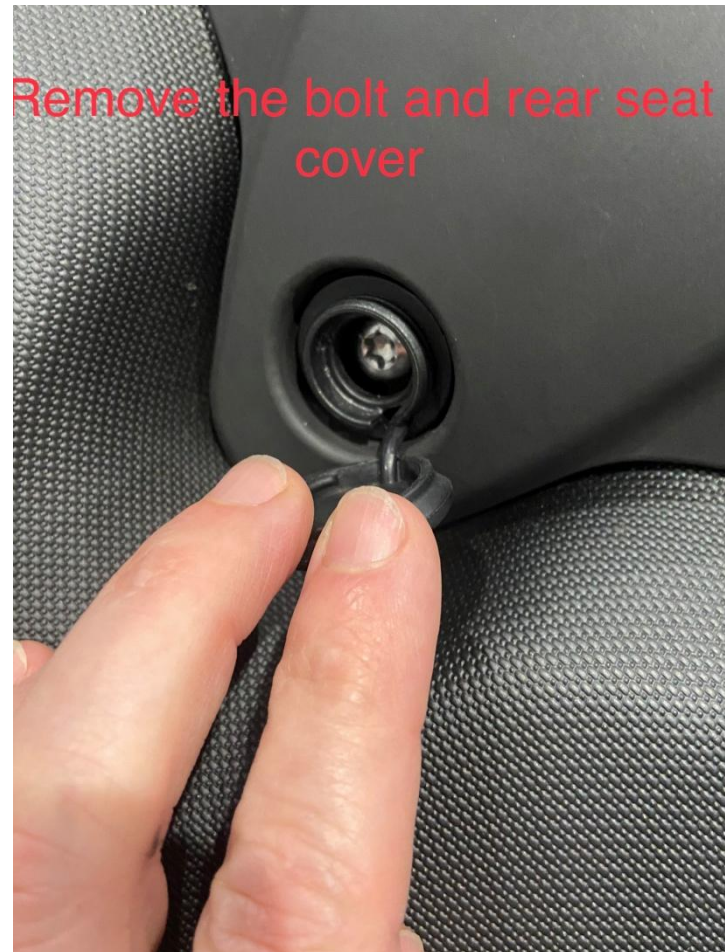


Step 3

Remove the two seat bolts and take the seat off

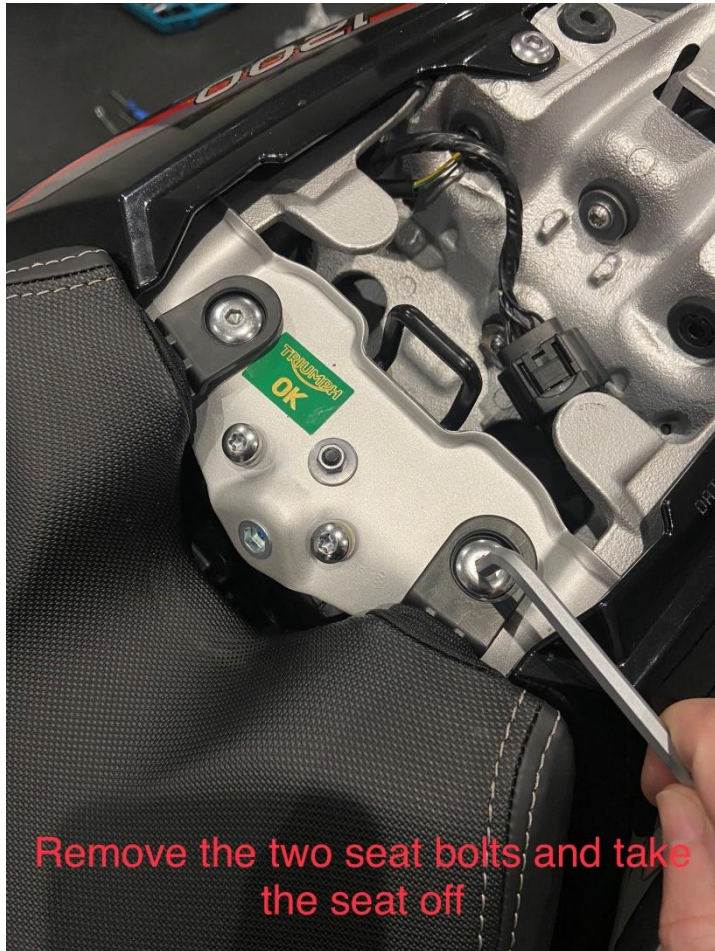

Step 4

This is the connection for the rear light cluster

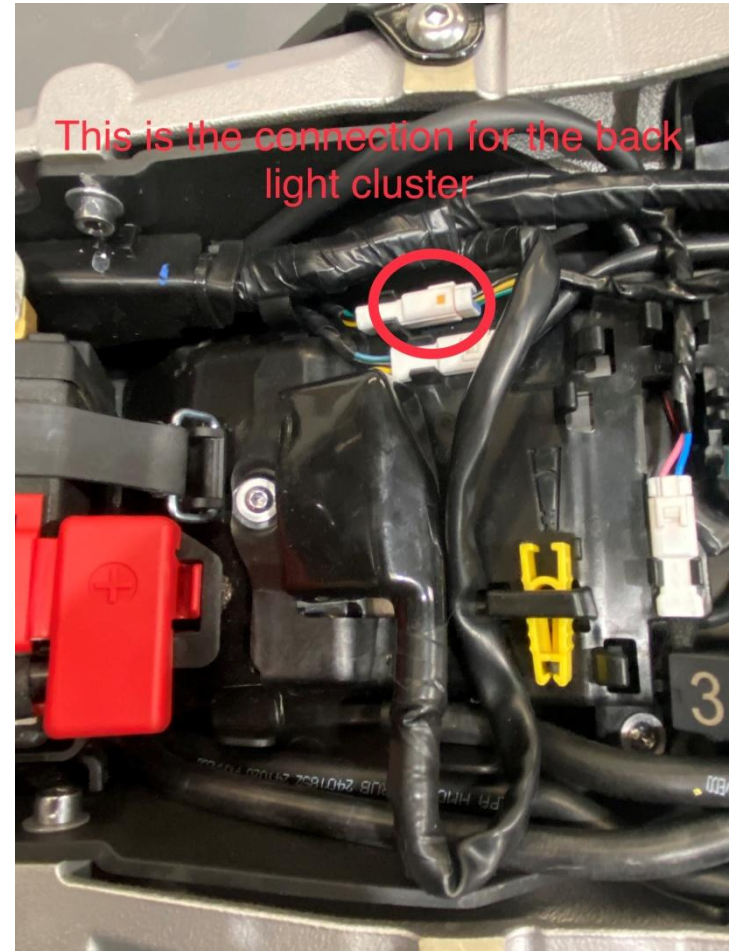


Step 5

Using your thumbnail press and pull the connector apart. Do not pull the cables. If you press the correct place the connector comes apart easily



Step 6

Remove the four bolts that holds the existing tail tidy then gently pull the plastic cover downward. This cover just pops off on the three rubber grommets that secure it

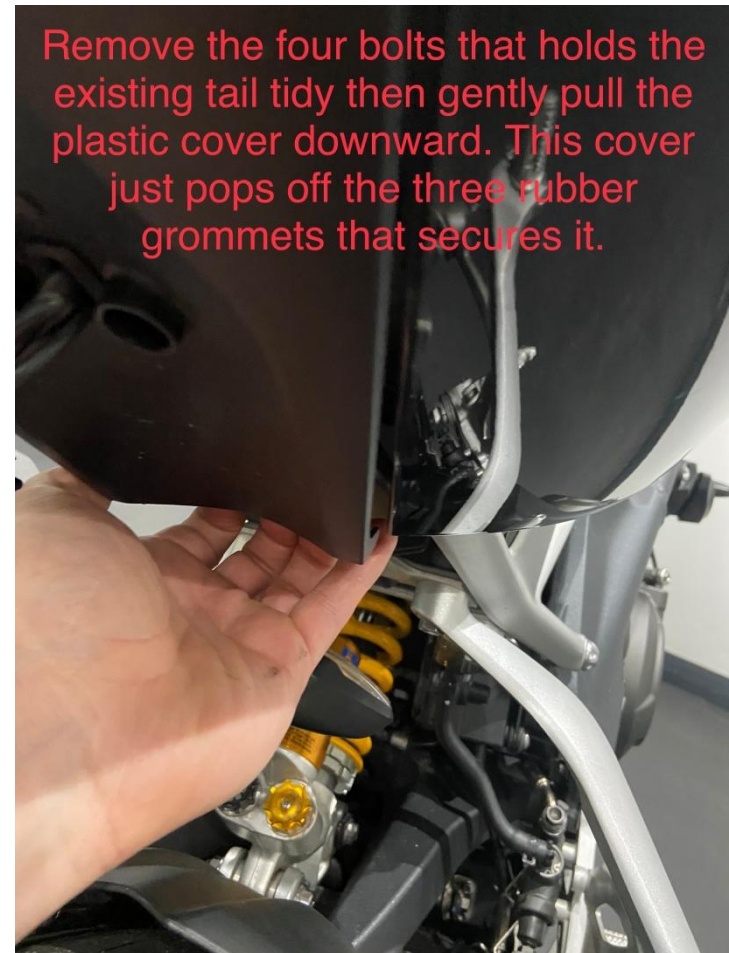

Step 7

Using both hands gently pull the cover away from the final two fixings



Step 8

Push the grommet out from the inside of the plastic panel before trying to pull the cables through



Step 9

Once free, feed the cables out of the panel



Step 10

Split Triumph tail light assembly, remove indicators, number plate light and wiring loom to use on your new tail light tidy




Step 11

Fit the number plate light



Step 12

Use the two screws and washers provided

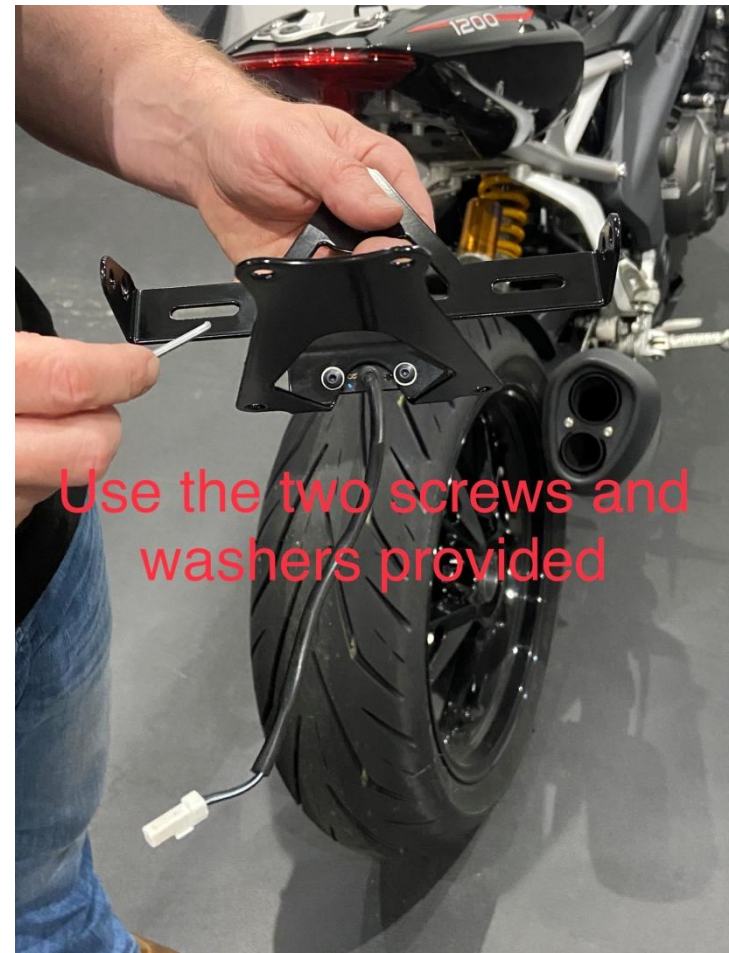


Step 13

Do not over tighten!!



Step 14

Feed the indicators through the hanger as shown

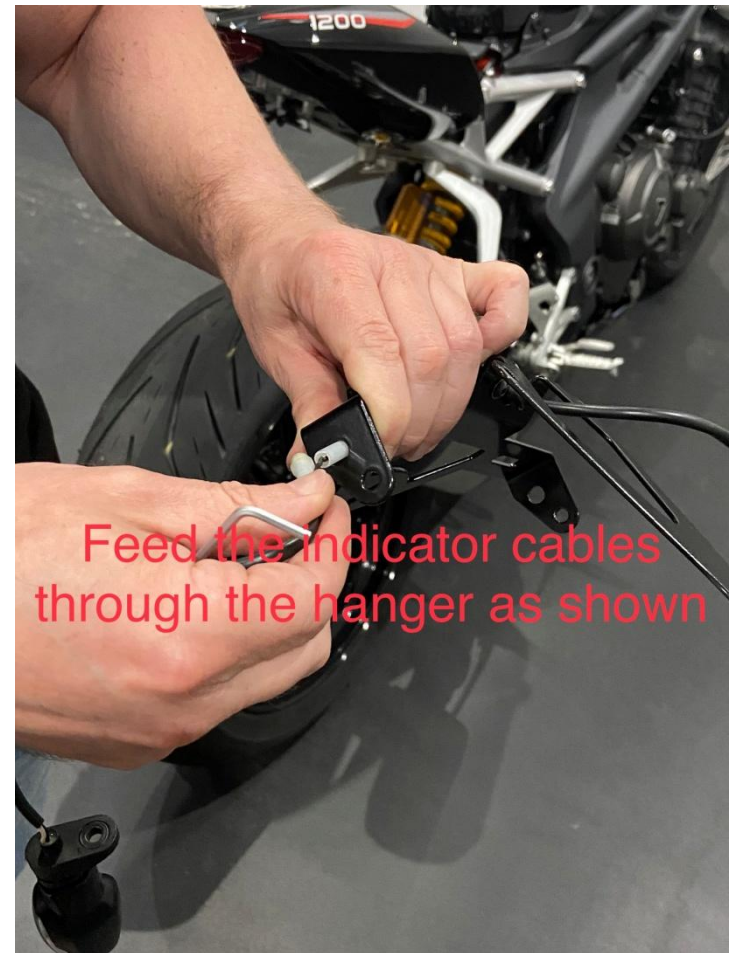

Step 15

Push the indicator flush to the plate



Step 16

Bolt the indicator to the plate using the bolt, fibre washer and nut provided as shown



Step 17

Tighten into position



Tighten into position

Step 18


Feed the cable s through the plate once all lights are fixed



Feed all cables through the plate once all lights are fitted


Step 19

Push the cables back through the grommet

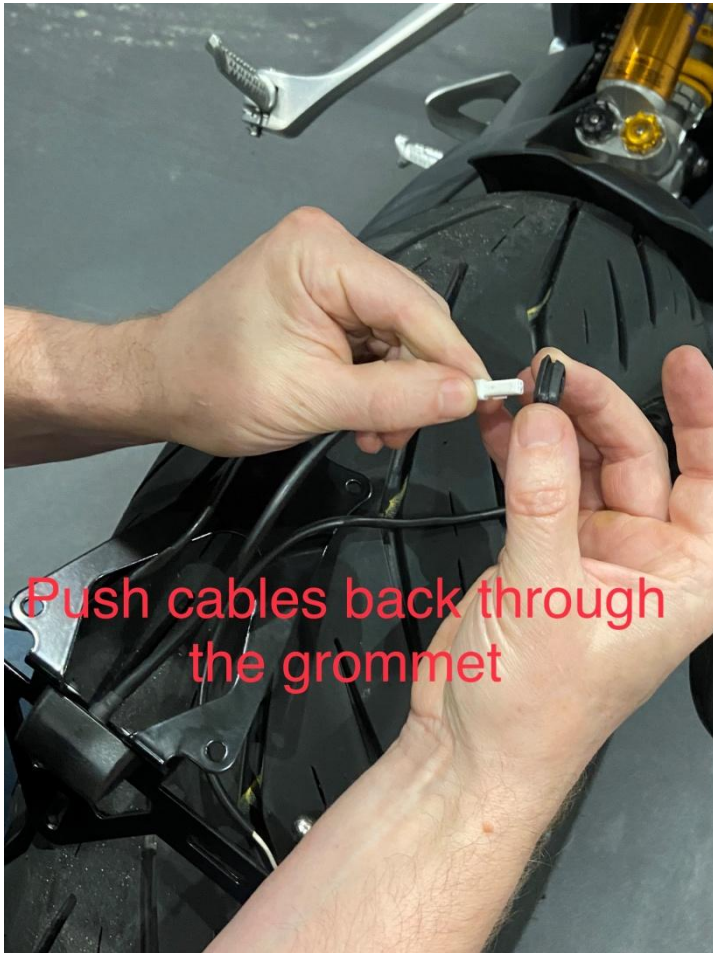

Step 20

Get all three cables through as shown

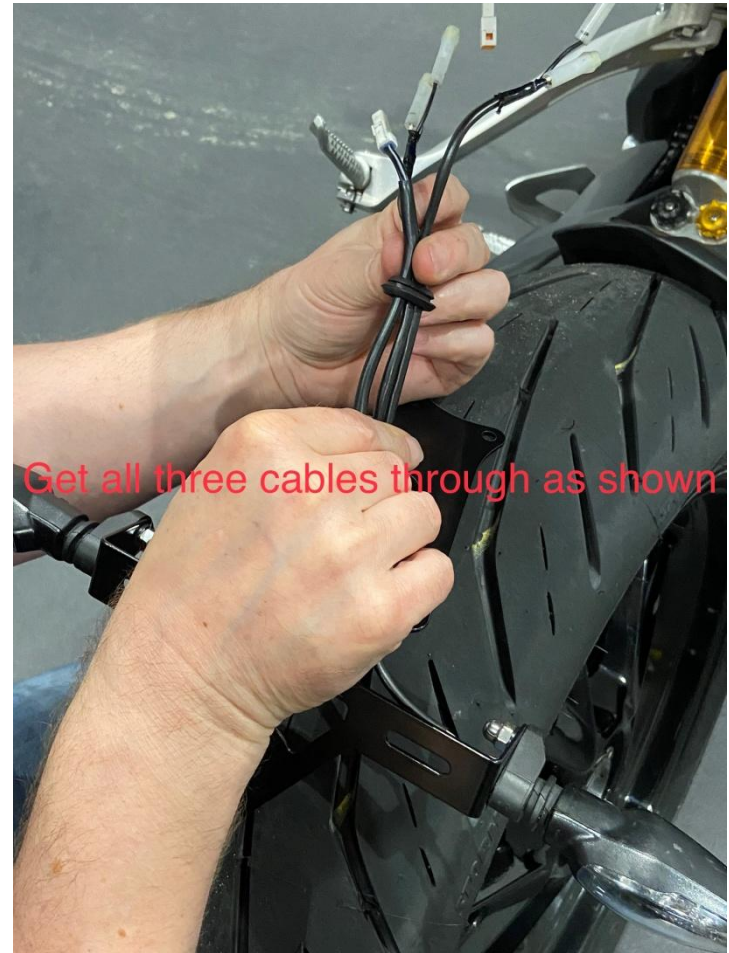

Step 21

Feed the cables back through the under-seat cover



Step 22

Press the rubber grommet into place



Step 23

Thread the wiring loom extension through the frame




Step 24

Connect the cables back together, note that the red marker denotes the R/H indicator. Check everything works at this point.



Step 25

Whilst feeding the cables through the seat area push back the plastic under tray and tail tidy into position. This fits easily if you have lined the lugs and grommets up.

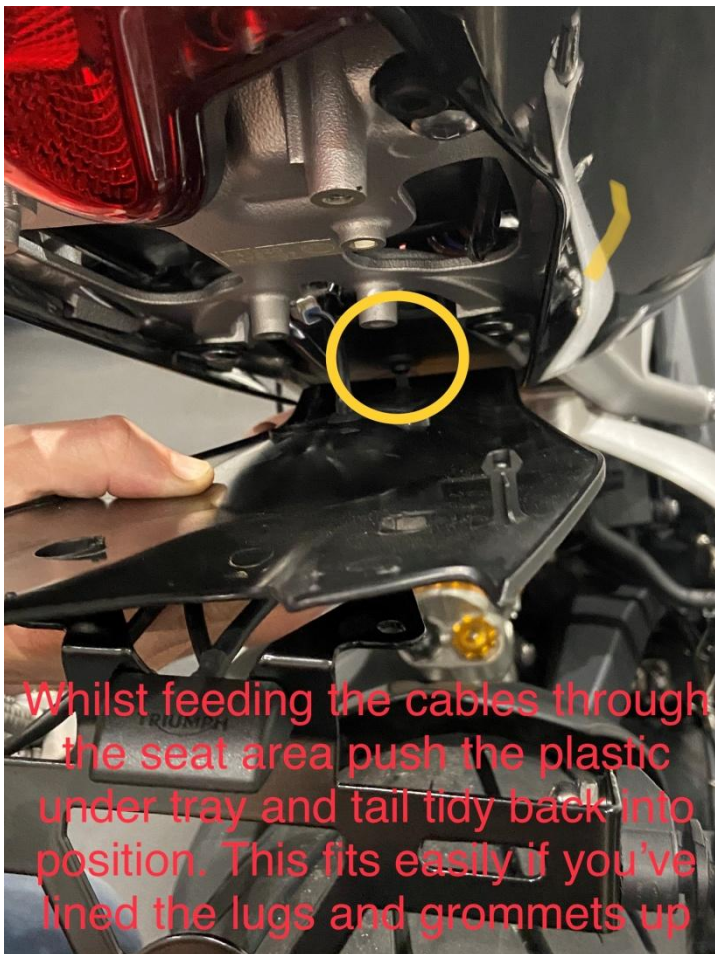

Step 26

Push all three lugs into place until the tray is seated properly



Step 27

Fix the new tail tidy in place using the new bolts and fibre washers provided




Step 28

Tighten all four bolts, make sure that the cables are not trapped and are sat in the free space



Step 29

Thread the cable under the pipe as shown

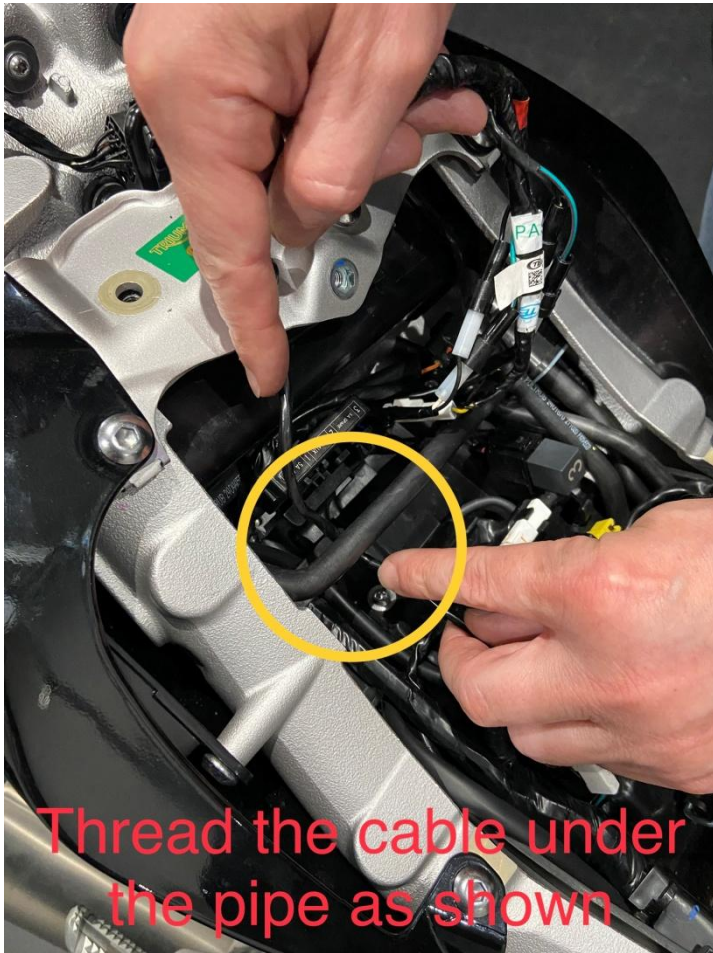

Step 30

Store the excess cable in the space shown



Step 31

Reconnect the connector and clip back into place as shown



Step 32

Finally re-fit the seat and rear seat cover

